


EXPLANATION	
MW-1	Monitoring well
G = 26	Gasoline concentration in soil (ppm)
D = 5,200	Diesel concentration in soil (ppm)
MTBE = ----	MTBE concentration in soil (ppm)

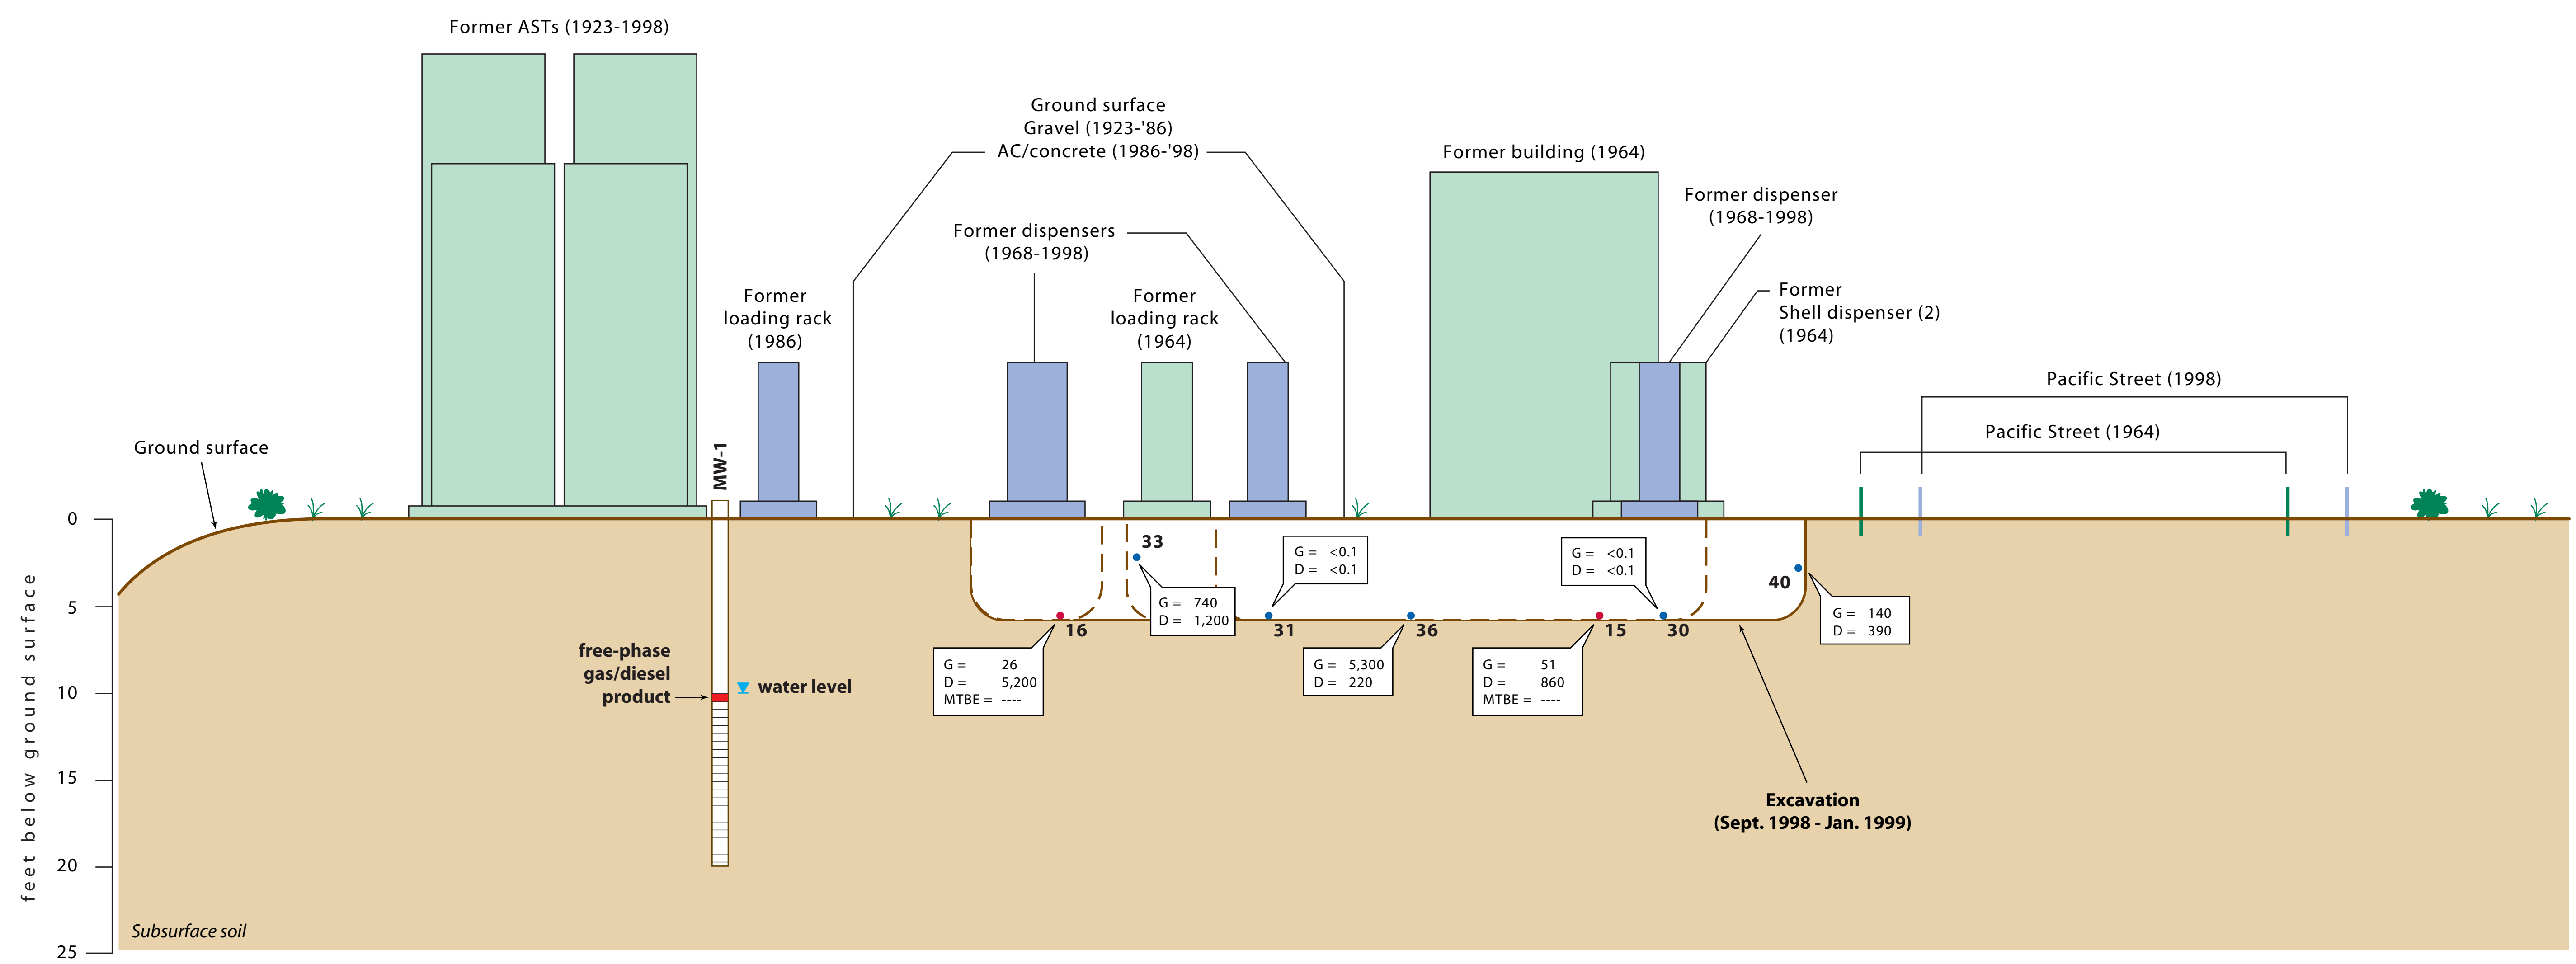

Site Cross Section - Former Shell, Gibson, Redwood, Buljan Bulk Plant, Rocklin, California